

Assembly & Installation Instructions for: 023520-010-FR001


Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

## WARMING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electricalwiring, call a qualified electrician to install this unit .More than one person may be necessary to install fixture ,make sure you have enough qualified help.
- 2. Turn off the power to the fixture's circuit at the service panel. Use a coltage detector to verify that the power is off.
- 3.DO NOT install bulb which exxeeds the maximum wattge specified on the socket label.

## **Fixture Assembly**

- Step 1. Place mount mounting and wiring steps before glass installation step
- Step 2. Assemble crystal to the lamp body as shown, Align holes in crystal with holes in fixture and secure crystal to fixture using headless screw
- Step 3. Lnstall candelabra bulbs,do not use bulbs that exceeds 40W

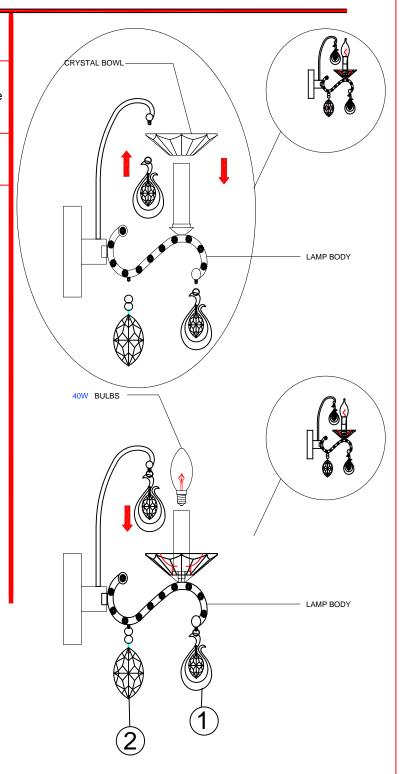



Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

## **Fixture Assembly**

Step 4. Fasten 2 (state specification of screw) into mounting plate so that they extend away from wall when mounting plate is installed

Step 5. Attach the mounting plate to outlet box with sorews

Step 6. Refer to wiring diagram.

Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector.

Step 7. Carefully tuck in all wires Attach the backplate with the mounting screw on the crossbar. Secure fixture with shell hnobs.

